

6.6KW Portable DC EV Charger

Model DC7KEP



Specifications

Item	Description
Model	DC7KEP
Dimension (H x W x D)	421 x 229 x 154 mm
Weight	14.2 kg
Storage Temperature	-40 to 176 ° F (-40 to 80 ° C)
Operating Temperature	-22 to 131 ° F (-30 to 50 ° C)
Operating Humidity	5 % to 95%
Mounting	N.A, Portable
Enclosure Ratings	IP32
Protection	Leakage Current and Ground Fault Protection, Lightning Protection, Overvoltage Protection, Undervoltage Protection, Overcurrent Protection, Overtemperature Protection
Ground Fault Detection	Built-in type A RCD (residual-current device)
Warranty	2 years
Standards	EN/IEC 61851-1:2019 EN/IEC 61851-21-2:2021 IEC/IEC 62955:201 IEC/IEC 62196-2
Status Display	LED
Charging Cable Length	22.9 ft. (7 m)
Input Wiring	Hardwired
Input Cord	L1, L2, L3, N (Neutral), and PE (Protective Earth)

AC Input Range	220±20 %Va.c., 50/60 Hz
Power	6.6KW
Output Current Rating	Maximum 20A
Output Voltage Range	250-610VDC
Connector Type	Type 2
Charging Mode	Plug-and-Charge

2 Charging Operation

2.1 Plug-and-Charge Mode (Default)



- When the charging station is on standby, plug in the connector to your EV, and the LED will turn blue from purple.
- The LED will be flashing green while charging.
- When your EV is fully charged, the LED will be solid green, unplug the connector and place it back into the holster.



If you need an emergency stop while charging, please press the RESET BUTTON then unplug the connector.

1. without any operation.
 2. Once you enable the RFID mode, the plug-and-charge mode will be disabled, if you want to use the plug-and-charge mode, please contact us
- When the charging station is on standby, plug in the connector to your EV, 6 LED Indicator

Description	Led Indicator
Standby	Solid Purple
Connector Plug in	Solid Blue
Charging	Flashing Green
Fully Charged	Solid Green
RFID Card Setting	Solid Orange
Fault	Flashing RED

3 Troubleshooting

LED Status	Problems	Solutions
The red light flashes slowly once and quickly once, alternately cycle.	Grounding Fault	<ol style="list-style-type: none"> 1. Immediately turn off the leakage/overcurrent protection switches in the power distribution box. 2. Check whether the input cables are grounded correctly. 3. After the fault is rectified, power on the device again. If the fault persists, contact us.
The red light flashes slowly twice and quickly twice, alternately cycle.	Output Overcurrent	<ol style="list-style-type: none"> 1. Immediately turn off the leakage/overcurrent protection switches in the power distribution box. 2. Check whether there is low impedance or short circuit between the charger output line. 3. Ensure the charging current to less than 35A. 4. After the fault is rectified, power on the device again. If the fault persists, contact us.

Website: www.rf-point.com.sg

The red light flashes slowly twice and quickly for 4 times, alternately cycle.	Over-heating	<ol style="list-style-type: none"> 1. Check the charger installation environment. 2. Check whether there are other heating devices nearby. 3. Ensure that the ambient temperature is below 50°C
The red light flashes slowly for 3 times and quickly for 2 times, alternately cycle.	Input Overvoltage	If the voltage exceeds 265Vac for a short time, wait for the power grid to restore itself to the normal voltage range. Contact local power grid company if the voltage fault persists.
The red light flashes slowly for 3 times and quickly for 3 times, alternately cycle.	Input Undervoltage	If the voltage under 90Vac for a short time, wait for the power grid to restore itself to the normal voltage range. Contact local power grid company if the voltage fault persists.
The red light flashes slowly twice and quickly once, alternately cycle.	Relay Adhesion	Please contact us if the fault persists.
The red light flashes slowly for 2 times and quickly for 3 times, alternately cycle.	Residual Current Detected	<ol style="list-style-type: none"> 1. Immediately turn off the leakage/overcurrent protection switches in the power distribution box. 2. Check whether the charger output line is damaged or has low impedance to the ground or short circuit. 3. After the fault is rectified, power on the device again. If the fault persists, contact us.
The red light flashes slowly for 3 times and quickly once, alternately cycle.	L/N Connected Reversely	<ol style="list-style-type: none"> 1. Immediately turn off the leakage/overcurrent protection switches in the power distribution box. 2. Check whether the input L/N cables are connected in correct sequence. 3. After the fault is rectified, power on the device again. If the fault persists, contact us.

The red light flashes slowly once and quickly twice, alternately cycle.	CP Frequency Fault	<div>1. Check whether the charging connector is connected correctly and stably.</div> <div>2. IF the fault persists, contact us.</div>
The red light flashes slowly once and quickly for 3 times, alternately cycle.	CP Duty Cycle Fault	
The red light flashes slowly once and quickly for 4 times, alternately cycle.	CP Voltage Level Fault	

1
3

8 Safety Warning



For your own safety and the safety of others, and to prevent damage to the device and vehicles upon which it is used, it is important for all users to read and follow this manual and safety instructions during installation, operation, and maintenance. Non-compliance may cause damage to the EV charger, and may also lead to electric shock, fire, property damage, and personal injury.

Safety Instructions

This product should only be installed by a licensed electrician in accordance with all local codes and ordinances.

Please turn off the power at the circuit breaker before installing or cleaning this product.

Please do not install or use this product near flammable, explosive, rough or combustible materials, chemicals or vapors.

Please do not use the product if the enclosure or the EV connector is frayed, broken, otherwise damaged, or fails to operate.

Website: www.rf-point.com.sg

Please do not operate this product at a temperature beyond -30 to 55 ° C.

- Please do not repair or refit without authorization, contact our support for help.
- Please do not disassemble safety signs, warning notices, labels, or markings.
Please do not spray water or other liquids directly onto the charging station or the connector.
- Do not immerse the charging connector in liquid.
- Please do not forcibly fold or apply pressure to any part of this product or use sharp objects to damage it.
- Please do not subject this product to strong force or impact or pull, twist, tangle, drag or step on it to prevent damage to itself or its components during transportation.
- Please read the safety instructions in the manual carefully when using our EV charger to charge your electric vehicle.



Made in China

Website: www.rf-point.com.sg